

clarity

©Clarity products are manufactured by Clarity
Products LLC

4295 Cromwell Rd Ste 309 Chattanooga, TN 37421
(800)426-3738

website: www.clarityproducts.com

clarity®

E
N
G
L
I
S
H

WakeAssure+

Alarm Clock



E
S
P
A
Ñ
O
L

User Guide

F
R
A
N
Ç
A
I
S

Table Of Contents

Safety Instructions3
Function Identification5
How to set the time and Alarm.6
How to turn off the alarm6
Features and Modes7
Battery Backup8
Warranty and Service9

Important Safety Instructions

CAUTION:

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY SAME TYPE 3A, 125V FUSE

When using your alarm clock, always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Read and understand all Instructions. Observe all warnings and other markings on the product.
2. There may be a slight chance of electric shock from lightning.
3. Do not use this product near water, or when you are wet. For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
4. If this product does not operate normally, you cannot resolve the problem, or if the product is damaged, refer to the Clarity Warranty. Do not open this product except as may

be directed in this owner's manual. Opening this product or reassembling it incorrectly may expose you to hazardous voltages or other risks. Opening this product automatically voids the warranty.

5. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled on the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in further damage.
 - E. If the product has been dropped or appears damaged.
 - F. If the product exhibits a distinct change in performance.

SAVE THESE INSTRUCTIONS

Function Identification

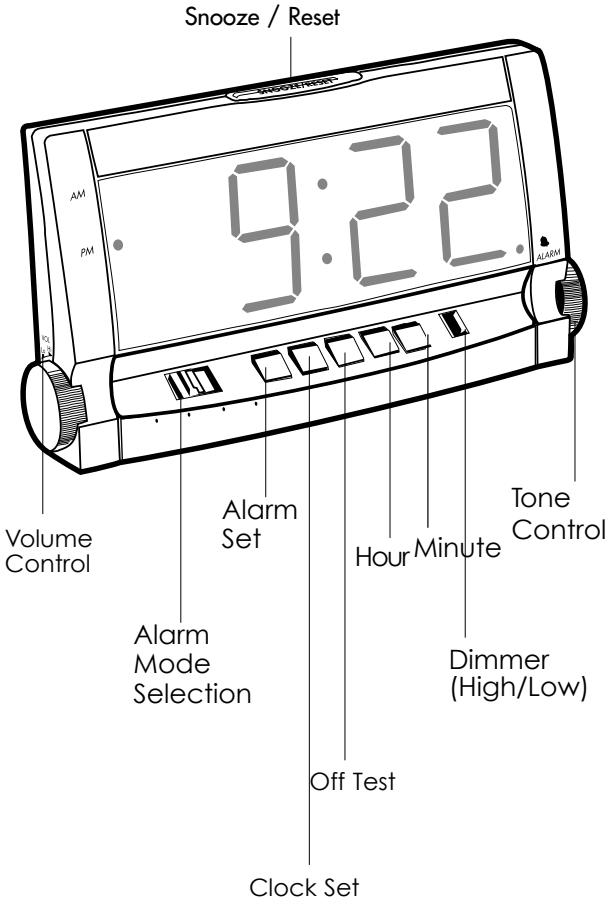

How to set the time and alarm

1. **To set time** : Press and hold the "SET CLOCK" key, press the HOUR key and the digit will increase one by each press or you can press and hold HOUR key then will quickly get to the desired HOUR, and repeat the same steps for the MINUTE to set the minute.
2. **To set alarm** : Press and hold "SET ALARM" key, press "HOUR" and "MINUTE" key to the correct alarm time.
3. **TEST KEY** : Press the TEST key to check the alarm mode, press again to turn off the test feature.

How to turn off the alarm

1. When the alarm is on, you can press the SNOOZE key to go in SNOOZE mode, the clock will re-alarm in 9 minutes, you can continue this process 16 times. Or you can press SNOOZE key for three seconds to turn off the alarm. The clock will re-alarm the same time next day.

Features and Modes

Clock Alarm Modes:

Choose alarm mode you wish to be awakened, moving the clock mode switch to one of the following selections:

ALL: sound, bedshaker and lighted snooze button

FLASH/SOUND: sound and lighted snooze button

FLASH/BEDSHAKER: bedshaker and lighted snooze button

BEDSHAKER/SOUND: bedshaker and sound

FLASH: only lighted

BEDSHAKER: only bedshaker

OFF: No Alarm

Ringer Model:

ALL: sound, bedshaker and lighted snooze button

FLASH/SOUND: sound and lighted snooze button

FLASH/BEDSHAKER: bedshaker and lighted snooze button

BEDSHAKER/SOUND: bedshaker and sound

FLASH: only lighted

BEDSHAKER: only bedshaker

OFF: No Alarm

DIMMER HIGH/LOW: The dimmer switch, can choose the brightness of the display.

BEDSHAKER JACK: Use this jack for bedshaker connecting

Volume: Set the volume of the alarm sound

Tone: Set the tone of the alarm sound

9 V DC : this jack is for the switching power use.

Battery Backup

A 9-volt battery can be installed to retain time and the programming of the alarm settings in case of a power outage. When the power comes back on, the clock's previous time and alarm settings will be still be operational. During a power outage, the clock will not display the current time and all its alarm functions will not be operational. Be sure to plug the unit in before installing batteries. Please check the battery condition after one year and replace the old battery – a leaking battery can destroy your clock. Please observe caution when handling electrical appliances.

Warranty and Service

Clarity Products warrants the WakeAssure+ Alarm Clock against any defect in materials or workmanship for the period of one year from the date of purchase.

If your Clarity product is defective and returned within 30 days of the date of purchase, your WakeAssure+ Alarm Clock dealer will replace it at no charge.

If returned after 30 days but within one year, we will repair or replace it at no charge. In the repair of your WakeAssure+ Alarm Clock, we may use new or reconditioned replacement parts. If we elect to replace your WakeAssure+ Alarm Clock, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for either 90 days or the remaining time on the original warranty period, whichever is longer. When in need of warranty repair, please call our customer service department at (800) 426-3738 (voice). They will help you process your return shipment. You must prepay all shipping costs.

Implied warranties, including those of fitness for a particular purpose and

merchantability (an unwritten warranty that the product is fit for ordinary use), are limited to one year from date of purchase. We will not pay for loss of time, inconvenience, loss of use of your WakeAssure+ Alarm Clock, or property damage caused by your WakeAssure+ Alarm Clock or its failure to work, or any other incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

We suggest you save the original package materials in the event you need to ship the WakeAssure+ Alarm Clock. When shipping for warranty repair, include your name, address, phone number, proof of date of purchase and a description of the problem. After repairing the product, we will ship it back to you at no cost within the United States.

This warranty does not cover defects resulting from accidents, damage while in transit to our service location, alterations, unauthorized repair, failure to follow instructions, misuse, use outside the United States or Canada, fire, flood and acts of God.